

### **Encoder Connections**

Sentinel Breakout Board, rev A Quick Setup Guide Pin functions are listed from top to bottom

5V - Encoder Power

B - Encoder Quadrature B Input

A - Encoder Quadrature A Input

I - Encoder Index Input

GND - Encoder and Analog Device Common

# **Analog Input Connections**

GND - Analog and Encoder Power Common

AIN - 0 - 3.3VDC or 0 - 5VDC Analog Input Voltage Range

VA+ - Analog Device Power - 3.3 or 5VDC (SJ2 setting)

## **Limit Switch Connections**

FWD - Forward Limit Switch

**REV - Reverse Limit Switch** 

GND - Limit Switch Common

# Jumper Settings (Default: SJ1 - 0-5VDC; SJ2 - 5VDC)

SJ1 - Analog Input Range Select

Closed = 0 - 5VDC; Open = 0 - 3.3VDC

SJ2 - Voltage Select for Analog Device Power (at VA+)
Left & Center Closed = 5VDC; Right & Center Closed = 3.3VDC

### **LEDs**

GRN - 3.3VDC and 5VDC Power Present (from Talon SRX)

YLW - Quadrature and Index Inputs (lit when input is low)

RED - Limit Switch Inputs (lit when input is low)